

**DMX Values**

52 Ch	Channel	Function	Value	Percent/Setting
	1	Red 1	000 ó 255	0-100%
	2	Green 1	000 ó 255	0-100%
	3	Blue 1	000 ó 255	0-100%
	4	Amber 1	000 ó 255	0-100%
	5	Red 2	000 ó 255	0-100%
	6	Green 2	000 ó 255	0-100%
	7	Blue 2	000 ó 255	0-100%
	8	Amber 2	000 ó 255	0-100%
	9	Red 3	000 ó 255	0-100%
	10	Green 3	000 ó 255	0-100%
	11	Blue 3	000 ó 255	0-100%
	12	Amber 3	000 ó 255	0-100%
	13	Red 4	000 ó 255	0-100%
	14	Green 4	000 ó 255	0-100%
	15	Blue 4	000 ó 255	0-100%
	16	Amber 4	000 ó 255	0-100%
	17	Red 5	000 ó 255	0-100%
	18	Green 5	000 ó 255	0-100%
	19	Blue 5	000 ó 255	0-100%
	20	Amber 5	000 ó 255	0-100%
	21	Red 6	000 ó 255	0-100%
	22	Green 6	000 ó 255	0-100%
	23	Blue 6	000 ó 255	0-100%
	24	Amber 6	000 ó 255	0-100%
	25	Red 7	000 ó 255	0-100%
	26	Green 7	000 ó 255	0-100%
	27	Blue 7	000 ó 255	0-100%
	28	Amber 7	000 ó 255	0-100%
	29	Red 8	000 ó 255	0-100%
	30	Green 8	000 ó 255	0-100%
	31	Blue 8	000 ó 255	0-100%
	32	Amber 8	000 ó 255	0-100%
	33	Red 9	000 ó 255	0-100%
	34	Green 9	000 ó 255	0-100%
	35	Blue 9	000 ó 255	0-100%
	36	Amber 9	000 ó 255	0-100%

**DMX Values (cont.)**

<b>52 Ch (cont.)</b>	<b>Channel</b>	<b>Function</b>	<b>Value</b>	<b>Percent/Setting</b>
	37	Red 10	000 ∘ 255	0–100%
	38	Green 10	000 ∘ 255	0–100%
	39	Blue 10	000 ∘ 255	0–100%
	40	Amber 10	000 ∘ 255	0–100%
	41	Red 11	000 ∘ 255	0–100%
	42	Green 11	000 ∘ 255	0–100%
	43	Blue 11	000 ∘ 255	0–100%
	44	Amber 11	000 ∘ 255	0–100%
	45	Red 12	000 ∘ 255	0–100%
	46	Green 12	000 ∘ 255	0–100%
	47	Blue 12	000 ∘ 255	0–100%
	48	Amber 12	000 ∘ 255	0–100%
	49	Auto Programs	000 ∘ 010	No function
			011 ∘ 030	Auto 1
			031 ∘ 050	Auto 2
			051 ∘ 070	Auto 3
			071 ∘ 090	Auto 4
			091 ∘ 110	Auto 5
			111 ∘ 130	Auto 6
			131 ∘ 150	Auto 7
			151 ∘ 170	Auto 8
			171 ∘ 190	Auto 9
			191 ∘ 210	Auto 10
			211 ∘ 230	Auto 11
	231 ∘ 250	Auto 12		
	251 ∘ 255	Auto 1–12		
	50	Auto Speed	000 ∘ 255	Slow to fast
	51	Dimmer	000 ∘ 255	0–100%
	52	Strobe	000 ∘ 010	No function
			011 ∘ 255	Slow to fast

<b>48 Ch</b>	<b>Channel</b>	<b>Function</b>	<b>Value</b>	<b>Percent/Setting</b>
	1	Red 1	000 ∘ 255	0–100%
	2	Green 1	000 ∘ 255	0–100%
	3	Blue 1	000 ∘ 255	0–100%
	4	Amber 1	000 ∘ 255	0–100%
	5	Red 2	000 ∘ 255	0–100%
	6	Green 2	000 ∘ 255	0–100%
	7	Blue 2	000 ∘ 255	0–100%
	8	Amber 2	000 ∘ 255	0–100%
	9	Red 3	000 ∘ 255	0–100%
	10	Green 3	000 ∘ 255	0–100%
	11	Blue 3	000 ∘ 255	0–100%
	12	Amber 3	000 ∘ 255	0–100%

**DMX Values (cont.)**

<b>48 Ch (cont.)</b>	<b>Channel</b>	<b>Function</b>	<b>Value</b>	<b>Percent/Setting</b>
	13	Red 4	000 ó 255	0-100%
	14	Green 4	000 ó 255	0-100%
	15	Blue 4	000 ó 255	0-100%
	16	Amber 4	000 ó 255	0-100%
	17	Red 5	000 ó 255	0-100%
	18	Green 5	000 ó 255	0-100%
	19	Blue 5	000 ó 255	0-100%
	20	Amber 5	000 ó 255	0-100%
	21	Red 6	000 ó 255	0-100%
	22	Green 6	000 ó 255	0-100%
	23	Blue 6	000 ó 255	0-100%
	24	Amber 6	000 ó 255	0-100%
	25	Red 7	000 ó 255	0-100%
	26	Green 7	000 ó 255	0-100%
	27	Blue 7	000 ó 255	0-100%
	28	Amber 7	000 ó 255	0-100%
	29	Red 8	000 ó 255	0-100%
	30	Green 8	000 ó 255	0-100%
	31	Blue 8	000 ó 255	0-100%
	32	Amber 8	000 ó 255	0-100%
	33	Red 9	000 ó 255	0-100%
	34	Green 9	000 ó 255	0-100%
	35	Blue 9	000 ó 255	0-100%
	36	Amber 9	000 ó 255	0-100%
	37	Red 10	000 ó 255	0-100%
	38	Green 10	000 ó 255	0-100%
	39	Blue 10	000 ó 255	0-100%
	40	Amber 10	000 ó 255	0-100%
	41	Red 11	000 ó 255	0-100%
	42	Green 11	000 ó 255	0-100%
	43	Blue 11	000 ó 255	0-100%
	44	Amber 11	000 ó 255	0-100%
	45	Red 12	000 ó 255	0-100%
	46	Green 12	000 ó 255	0-100%
	47	Blue 12	000 ó 255	0-100%
	48	Amber 12	000 ó 255	0-100%

**DMX Values (cont.)**

10 Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ∘ 255	0–100%
	2	Red	000 ∘ 255	0–100%
	3	Green	000 ∘ 255	0–100%
	4	Blue	000 ∘ 255	0–100%
	5	Amber	000 ∘ 255	0–100%
	6	Strobe	000 ∘ 010 011 ∘ 255	No function Slow to fast
	7	Color Macro + White Balance	000 ∘ 010 011 ∘ 030 031 ∘ 050 051 ∘ 070 071 ∘ 090 091 ∘ 110 111 ∘ 130 131 ∘ 150 151 ∘ 170 171 ∘ 200 201 ∘ 205 206 ∘ 210 211 ∘ 215 216 ∘ 220 221 ∘ 225 226 ∘ 230 231 ∘ 235 236 ∘ 240 241 ∘ 245 246 ∘ 250 251 ∘ 255	No function R: 100% G: 0–100%B: 0 R: 100%–0 G: 100% B: 0 R: 0 G: 100% B: 0–100% R: 0 G: 100%–0B: 100% R: 0–100% G: 0 B: 100% R: 100% G: 0 B: 100%–0 R: 100% G: 0–100%B: 0–100% R: 100%–0 G: 100%–0B: 100% R: 100% G: 100% B: 100% A: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11
	8	Auto Programs	000 ∘ 010 011 ∘ 030 031 ∘ 050 051 ∘ 070 071 ∘ 090 091 ∘ 110 111 ∘ 130 131 ∘ 150 151 ∘ 170 171 ∘ 190 191 ∘ 210 211 ∘ 230 231 ∘ 250 251 ∘ 255	No function Auto 1 Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 Auto 7 Auto 8 Auto 9 Auto 10 Auto 11 Auto 12 Auto 1–12
	9	Auto Speed	000 ∘ 255	Slow to fast
	10	Dimmer Speed	000 ∘ 051 052 ∘ 101 102 ∘ 152 153 ∘ 203 204 ∘ 255	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 (slowest)

**DMX Values (cont.)**

<b>6 Ch</b>	<b>Channel</b>	<b>Function</b>	<b>Value</b>	<b>Percent/Setting</b>
	1	Dimmer	000 ó 255	0–100%
	2	Red	000 ó 255	0–100%
	3	Green	000 ó 255	0–100%
	4	Blue	000 ó 255	0–100%
	5	Amber	000 ó 255	0–100%
	6	Strobe	000 ó 010 011 ó 255	No function Slow to Fast

<b>4 Ch</b>	<b>Channel</b>	<b>Function</b>	<b>Value</b>	<b>Percent/Setting</b>
	1	Red	000 ó 255	0–100%
	2	Green	000 ó 255	0–100%
	3	Blue	000 ó 255	0–100%
	4	Amber	000 ó 255	0–100%